


# Super Automatic Bottle Filler Instructions

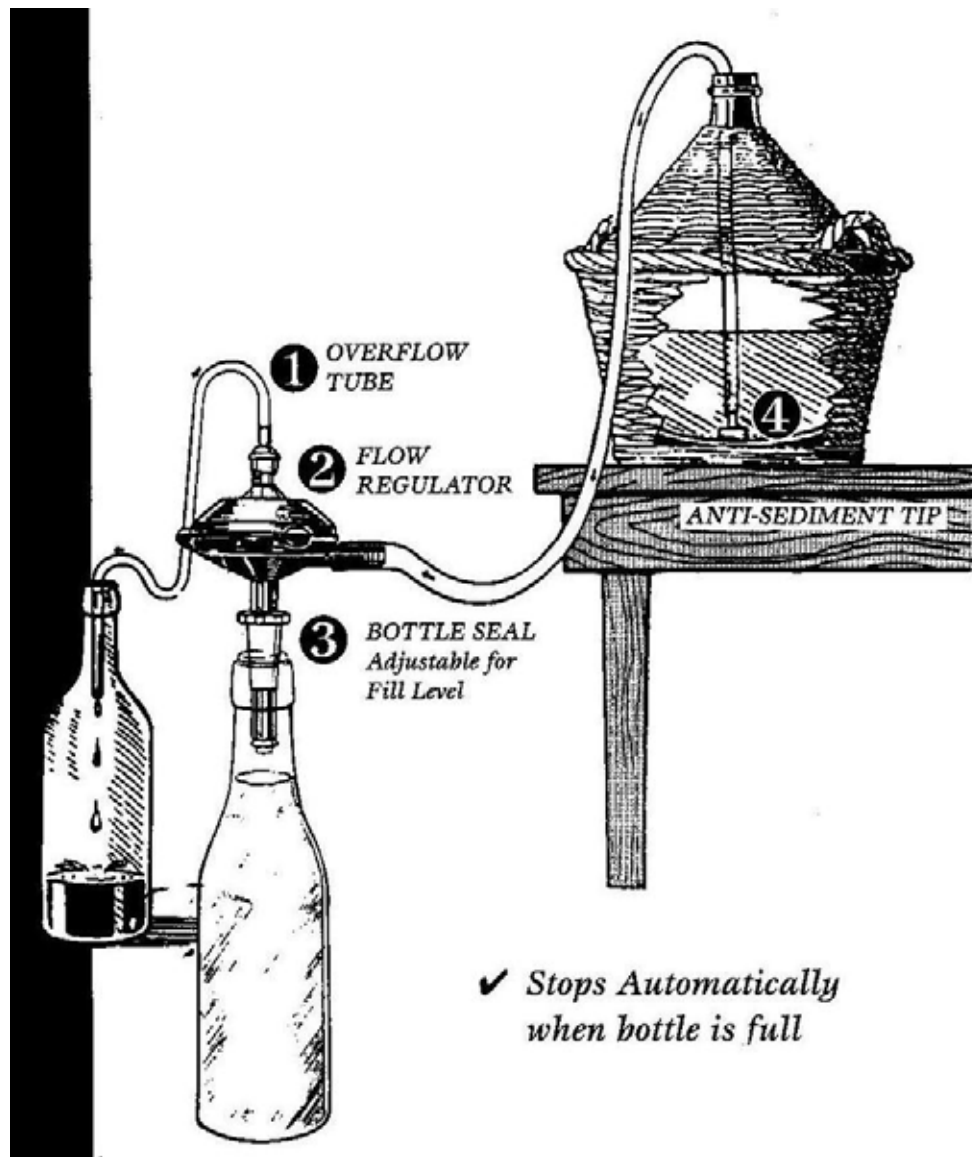

- Insert the tubing with the red anti-sediment tip (# 4 on diagram) into your carboy. Carboy must be higher than the bottles you are filling.
- Place the bottle filler into an empty bottle (see diagram).
- Push the center piece to the down/on position (2)
- Siphon (suck) out the air from the small tube. This will allow the wine to flow into your bottle. Continue siphoning until flow starts.
- Place the small tube (1) into a second empty bottle to collect any overflow.
- Once the bottle is full the center piece (2) will pop up.
- Ensure that the center piece pops up, thus stopping flow into the bottle. If the center piece (2) does not pop up; pull upwards to manually close the system. Adjust the flow regulator for the next bottle. (See note below).
- Place the filler into a new bottle, push the center piece (2) to the down/on position. Continue the process until all bottles are full.

## NOTES:

- 1] Flow regulator on the side of the center piece (2) may be adjusted to ensure that the unit shuts off at the correct level. Adjust accordingly if required.
- 2] The height of the rubber seal (3) that is inserted into the bottle may be adjusted for the level at which you would like the wine to rise. Wine will fill to the base of the spout.
- 3] If you are trying to start the unit and it will not draw, loosen the anti-sediment tip to ensure a clear path for wine.

**CAUTION:** Do not unfasten screws at the side of the unit. This will result in damage to the internal seal and the unit will not work properly.